## **HD SERIES - SPECIFICATION DATA SHEET 1.6**



### Luft Brasil Ind. Com. Ltda

R. Dom Andrés Lamas, 56
Tataupé São Paulo - SP
(11) 3795-0000
www.luftbrasil.com.br



**Interlock Transfer Panel** 



The Transfer Panel is an exchange point in which the final keys of one or more interlock sequences are exchanged for one or more different keys for additional operations.

All primary (initiating) keys must be inserted into the transfer panel before any secondary (retained) keys can be turned and removed. Once a secondary key is removed, all primary keys are held captive in the transfer panel.

Transfer panel primary keys are generally related to power sources (such as breakers, T/R switches, level detectors, etc.) and secondary keys are often associated with access doors.


Transfer keys, locks, and all mechanical parts are completely enclosed in a NEMA 12 enclosure.

HD Series Transfer Panels are designed to accept and release keys sequentially. Insert and turn the missing keys (one at a time starting from the end) and work your way towards the held keys. The held keys will be released (one at a time) in a continuation of the same sequence. Reverse the key sequence when restoring service.

## **OPTIONS**

- Key Sequence When ordering, specify the number of primary and secondary keys. Primary keys are removed from the transfer panel and retained in other interlocks. Secondary keys are held in the transfer panel.
- Enclosure NEMA 4 and NEMA 4X are available. Please specify the NEMA rating of the enclosure.
- Number of Locks See table on page 3 for details.
- Stamp Key Interchange specify an alphanumeric code to be stamped on the cylinder face and the key (e.g. A1, A2, B1, etc. up to 5 characters). See HD Series Data Sheet for Keys (3.4) and Terminology (4.1) for details.

# Luft Brasil Ind. Com. Ltda R. Dom Andrés Lamas, 56 Tataupé São Paulo - SP (11) 3795-0000 www.luftbrasil.com.br Www.kirkkey.com Interlock Transfer Panel

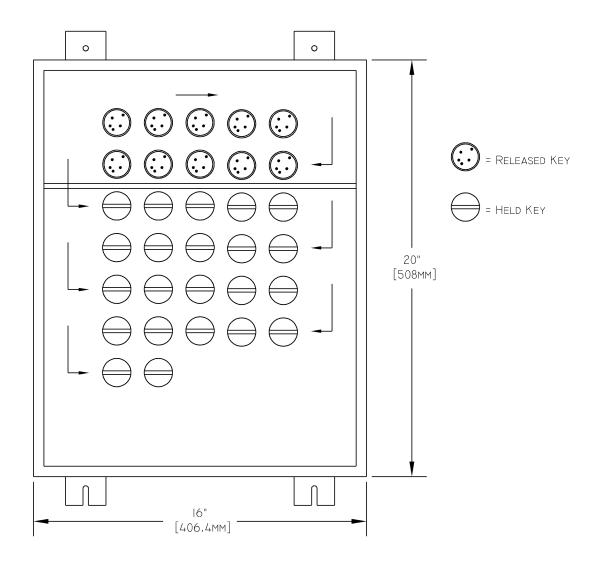

Transfer Panels are available in many sizes. Contact Kirk Key Interlock Company for more information.

# **HD SERIES - SPECIFICATION DATA SHEET 1.6**



# R. Dom Andrés Lamas, 56 Tataupé São Paulo - SP (11) 3795-0000 www.luftbrasil.com.br BRASILL

# **Interlock Transfer Panel**

Enclosure Size				Lock Arrangement	
ENCLOSURE No.	HEIGHT	WIDTH	DEPTH	No. OF Locks	Configuration
002	16"	12"	6"	I5 MAX	5 Rows, 3 cols.
003	16"	16"	6"	25 MAX	5 Rows, 5 cols.
004	16"	20"	6"	35 MAX	5 Rows, 7 cols.
005	20"	16"	6"	35 MAX	7 Rows, 5 cols.
006	20"	20"	6"	49 MAX	7 ROWS, 7 COLS.
007	20"	24"	8"	63 MAX	7 ROWS, 9 COLS.
009	24"	20"	6"	63 MAX	9 ROWS, 7 COLS.
010	24"	24"	8"	81 MAX	9 ROWS, 9 COLS.
016	24"	30"	8"	IO8 MAX	9 ROWS, 12 COLS.
011	30"	20"	8"	84 MAX	12 Rows, 7 cols.
012	30"	24"	8"	I08 MAX	12 Rows, 9 cols.
013	36"	24"	8"	135 MAX	15 Rows, 9 cols.
014	36"	30"	8"	I80 MAX	15 Rows, 12 cols.

Transfer Panels are available in many sizes. Contact Kirk Key Interlock Company for more information.