

WIRING DIAGRAM 156-618



www.kirkkey.com


Luft Brasil Ind. Com. Ltda

R. Dom Andrés Lamas, 56
Tataupé São Paulo - SP
(11) 3795-0000

www.luftbrasil.com.br



SKRU with Pushbutton and Signal Lamp 156-618

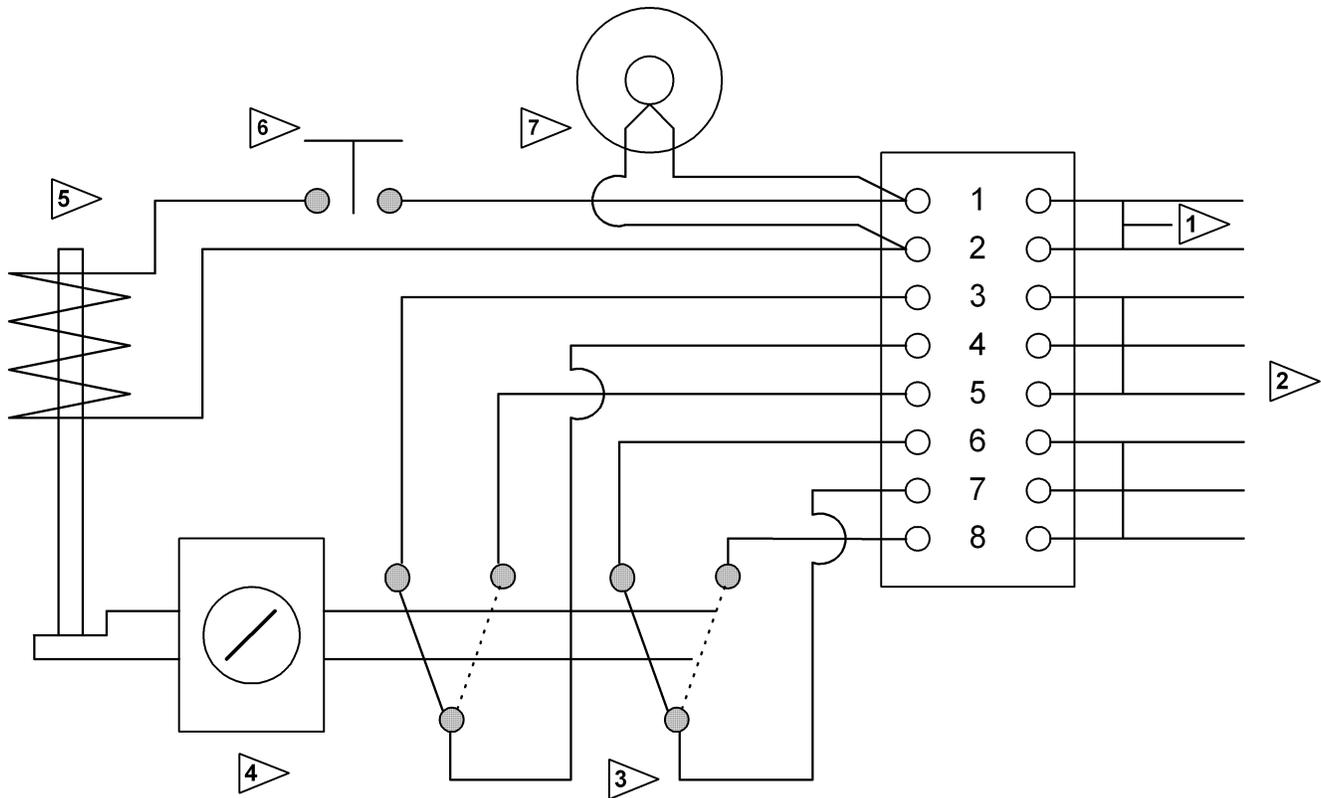

NOTES:

- 1) Circuit A - Input
- 2) Customer to wire this side only.
- 3) Double-pole, double-throw (DP/DT) auxiliary switch. Circuits 3-4, 6-7 are closed and circuits 4-5, 7-8 are open when the key is trapped in the interlock.
- 4) KIRK® key interlock with key normally trapped in lock. Key removable when solenoid is energized.
- 5) Solenoid (normally de-energized).
- 6) Pushbutton - close to energize solenoid.
- 7) Signal lamp indicates when solenoid is energized.