

# WIRING DIAGRAM for SKPM



www.kirkkey.com


Luft Brasil Ind. Com. Ltda

R. Dom Andrés Lamas, 56  
Tataupé São Paulo - SP  
(11) 3795-0000

[www.luftbrasil.com.br](http://www.luftbrasil.com.br)



## SKPM Wiring Diagram

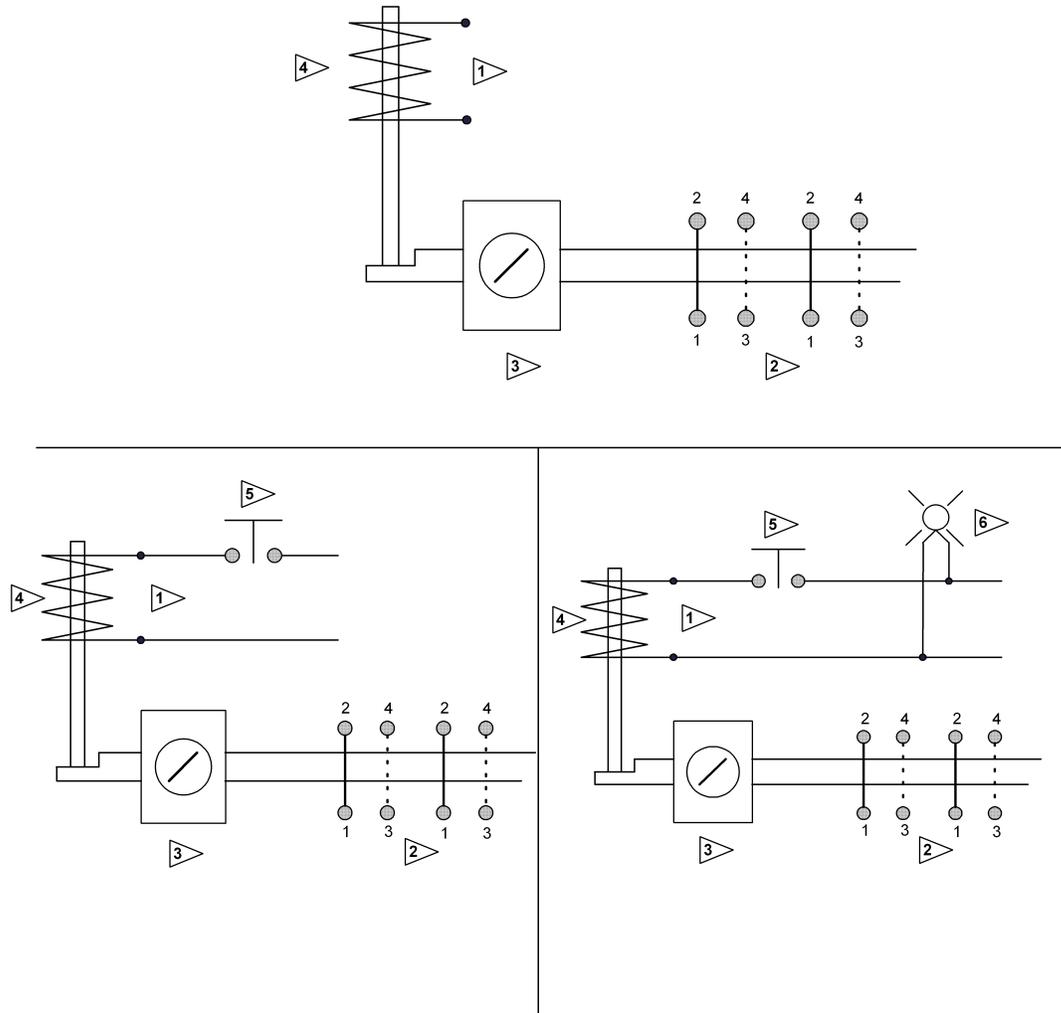

### NOTES:

- 1) Solenoid contact terminals.
- 2) Auxiliary contacts: two Square D Class 9001 KA1 contact blocks. Contacts 1-2 normally closed and contacts 3-4 normally open. The contacts change state when, after the solenoid is energized, the key is turned and removed.
- 3) KIRK® key interlock - key is normally retained in lock. Key is removable when solenoid is energized.
- 4) Solenoid (normally de-energized).
- 5) Optional pushbutton - close to energize solenoid.
- 6) Optional signal lamp indicates when solenoid is energized.